



SAFETY:

SETTING UP - Choose a campsite that is close to level as possible and use the corner stabilisers, each of which must be in proper contact with the ground. Ensure that the ground under each stabiliser is sufficiently stable to adequately support the van. If setting up on ground that is not level, it may be necessary to use a spacer block between the stabiliser foot and the ground. Blocks must be of solid timber or metal. Do not use bricks, paving blocks, etc.

For greater stability, stabiliser legs should be orientated outwards.

Front legs inclined towards the front

Rear legs inclined towards the rear

Generally, 1 to 2 clicks from vertical is sufficient, depending on the height of the chassis above the ground.

WARNING: Stabiliser legs must not be used to jack any wheel or wheels clear off the ground, as structural damage and cosmetic damage may occur.

Such damage is not covered by VanCruiser Warranty or G & S Chassis Warranty.

